

CNH AFS Pro 700

CFX 750




[source: CNH]

Disable / enable ISOBUS Task Controller (TC)


To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see "Cheatsheet_ISOBUS_Info"

The ISOBUS TC can be disabled in the "ISOBUS settings".

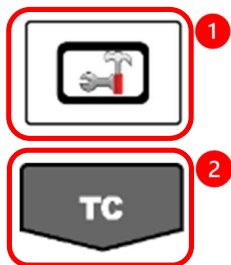

(1) Press the "Toolbox" button on the "Home" screen.

(2) Press the "TC" icon on the navigation bar to access the "TC Setup" screen.

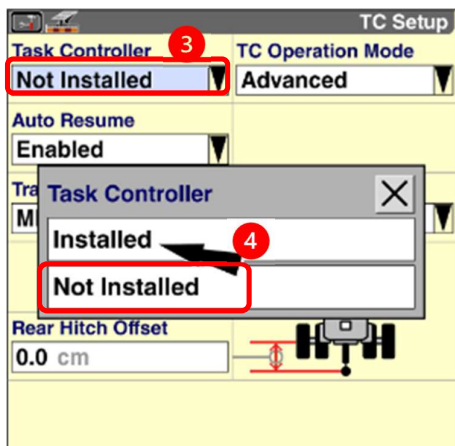

(3) Select the "Task Controller" pop-up field

(4) Select "Not Installed" in the pop-up menu to deactivate the TC. Confirm the reboot warning.

Remark: The terminal will do a reboot and the TC is disabled.