

Fendt ONE



[sources: Agco/Fendt]

Disable / Enable ISOBUS Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see “Cheatsheet_ISOBUS_Info”

The ISOBUS TC can be disabled / enabled in the ISOBUS settings.



- (1) On the main screen, tab the network quality icon on top of the screen in the status-bar.
- (2) Tab the ISOBUS Icon to enter the ISOBUS settings.
- (3) In the ISOBUS settings page, you find on top the current status of ISOBUS in general, TC (Task Controller) and VT (ISOBUS Terminal).
- (4) Tab the TC-Tile to automatically scroll down to the TC Settings.



- (5) In the TC-Settings, tab the slider to switch on / off the TC functionality of the terminal.

[picture sources: NEVONEX]