

John Deere GreenStar 3 2630 Display

GreenStar 3



 
[source: John Deere]

Disable / Enable ISOBUS Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see "Cheatsheet_ISOBUS_Info".




(1) Main Menu




(2) Display



 (3) Diagnostics



 
(4) Multiple Display



(5) Change Settings



 (6) Next Page



(7) Check / uncheck Task Controller to enable / disable TC



(8) Save settings and restart

 
[picture source: John Deere ISOBUS User Guide]

Set function instance of Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see “Cheatsheet_ISOBUS_Info”.




(1) Main Menu




(2) Display



 (3) Diagnostics



 (4) Multiple Display



(5) Change Settings



(6) Next Page



(7) Change function instance to change priority of task controller



(8) Save settings and restart

[picture source: John Deere ISOBUS User Guide]