

AmaPad 2



[source: Amazone]

AmaPad 2 is based on Topcon X30 Terminal

Disable ISOBUS Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see "Cheatsheet_ISOBUS_Info"

As far as known, it is not possible to completely disable the TC-Server functionality of the terminal. Therefore, the function instance of the TC must be increased, which is possible on later software versions.

Set function instance of Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see "Cheatsheet_ISOBUS_Info"



- (1) In the "Setup-Menu" select
"System"
"ISOBUS"
"TC"



- (2) Tab on "TC-Number" and enter the desired number.