

AmaTron 4



[Source: Amazone]

Disable ISOBUS Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see “Cheatsheet_ISOBUS_Info”

As far as known, it is not possible to completely disable the TC-Server functionality of the terminal. Therefore, the function instance of the TC must be increased.

Set function instance of Task Controller (TC)


To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see “Cheatsheet_ISOBUS_Info”



- (1) Select “Setup-Menu” on the main screen.

[picture sources:
Amazone Operating
manual - AmaTron 4]

(2) Select "ISOBUS"

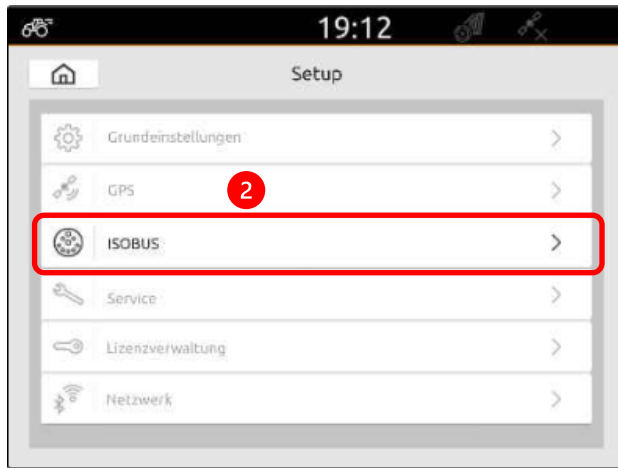

(3) Set the desired TC-Number.

