

CCI 800 / CCI 1200


CCI terminals are developed by the Competence Center ISOBUS e.V. and are used by several manufacturer of agriculture machines.

The CCI terminals have an App-like concept, where additional functionality can be licensed and enabled via "CCI.Apps".

CCI 1200



CCI 800

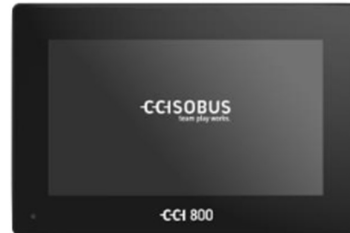

[sources: Competence Center ISOBUS e.V.]

Disable / enable ISOBUS Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see "Cheatsheet_ISOBUS_Info"

The ISOBUS TC can be disabled in the "ISOBUS settings".




CCI 1200




CCI 800

- (1) Press the "Settings" button on the main screen.


[picture sources: CCI.OS 3.0 Operating instructions]

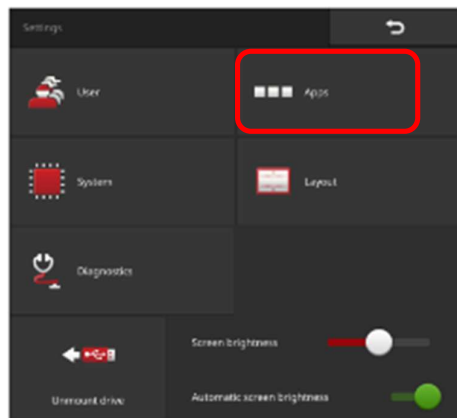

- (2) Open the "Apps" menu

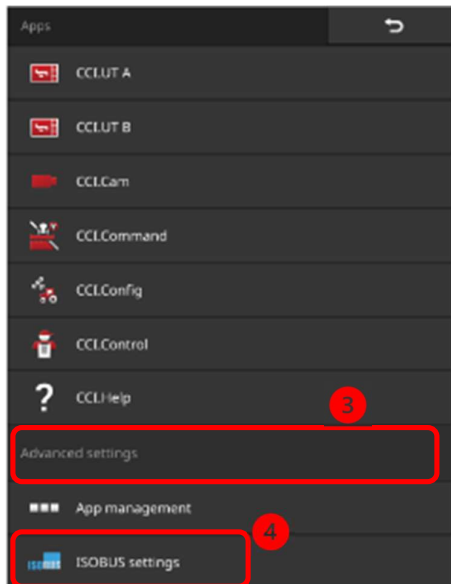

- (3) Scroll down to section “Advanced settings”
- (4) Press “ISOBUS settings”

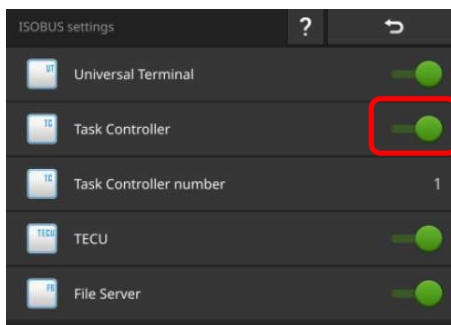


- (5) Tab the slider to disable / enable the TC-server

Set function instance of Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see “Cheatsheet_ISOBUS_Info”

The function instance (Task Controller No.) can be set in the “ISOBUS settings.

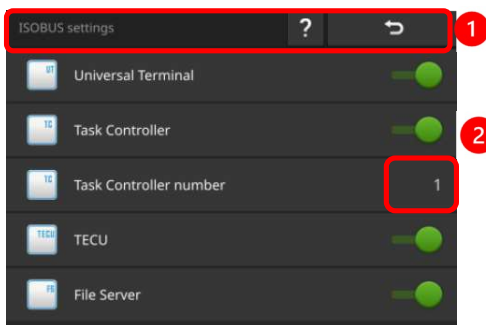

- (1) Follow step (1) to (4) from above to go to the ISOBUS settings
- (2) Change the number to the desired value.

[picture sources: CCI.OS 3.0
Operating instructions