

Topcon XD and XD+ console



[sources: Topcon]

Disable / Enable ISOBUS Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see "Cheatsheet_ISOBUS_Info".


On Topcon XD console it's not possible to deactivate the ISOBUS TC.

According to Topcon, up to the Horizon 4 Terminal series it was possible to deactivate TC functionality, but as Topcon is using TC also to communicate internally or to other Topcon components, this is not possible anymore. But it is possible to change the function instance of the TC.

Set function instance of Task Controller (TC)

To run a NEVONEX Digital Service, NEVONEX must be the task controller (TC) and all other task controllers must be disabled. If it is not possible to disable a TC, the function instance of the TC must be increased. For more information on ISOBUS, see "Cheatsheet_ISOBUS_Info".

The function instance can be set in the Task Controller Setup.

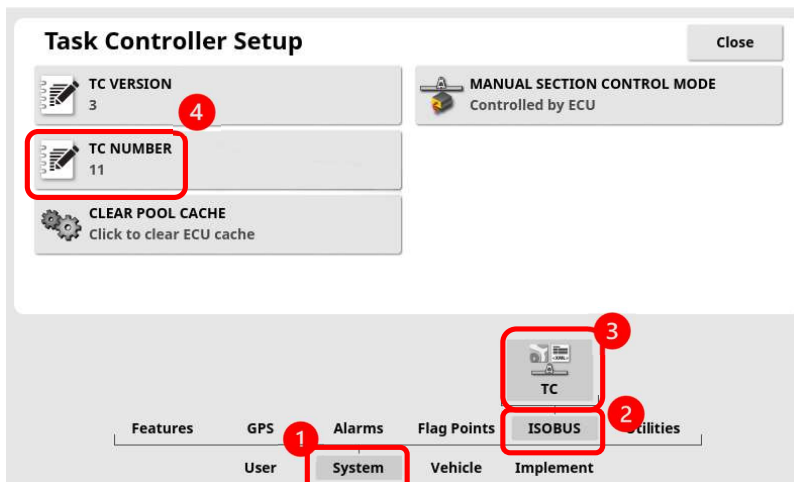

- (1) Select "System"
- (2) Select "ISOBUS"
- (3) Select "TC"
- (4) Change the TC Number to a higher value
(standard: 1, e.g. change to 2)

Remark: If required, restart the terminal.