

Information on how to activate the NEVONEX Box (RCU4-3X/10-N)


To activate the Rexroth RCU4-3X/10-N, perform the following steps before mounting the device on the tractor.

For activation, the box must have a continuous power supply and should therefore be connected to an external power supply. In addition, the box must have a permanent mobile connection via the LTE antenna.


To activate the NEVONEX Box, perform the following steps:

1) Supply power to the NEVONEX Box (12 V-16 V; 0.3 A-1.5 A)

Supply the power to the box using either the NEVONEX in-cab wiring harness or a self-constructed wiring harness and an external power supply.

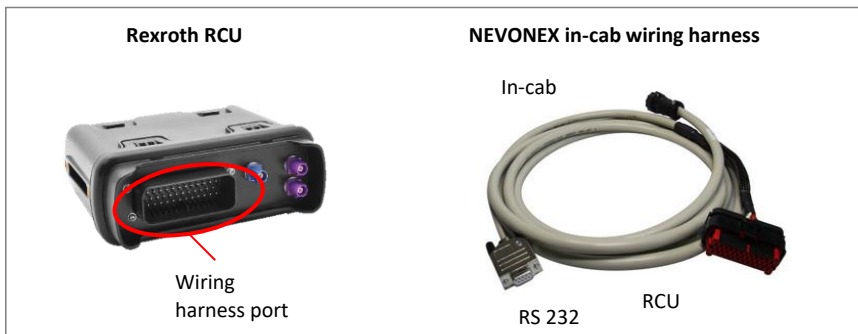

2) Connect the LTE/GPS antenna

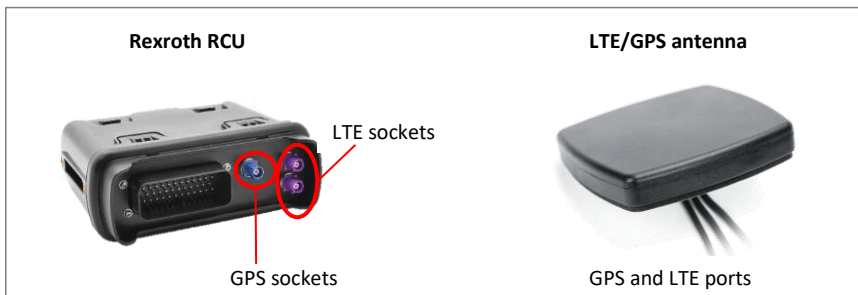


3) Send NEVONEX support an order to activate the NEVONEX Box

Contact NEVONEX support by email (support@nevonex.com), including the device ID and IMEI number of the box.

Kommentiert [A1]: AN CVO/PAC-NEV: Please update the template (EN/FR – footer).

Activating the NEVONEX Box

The numbers are located on the nameplate on the back of the box.

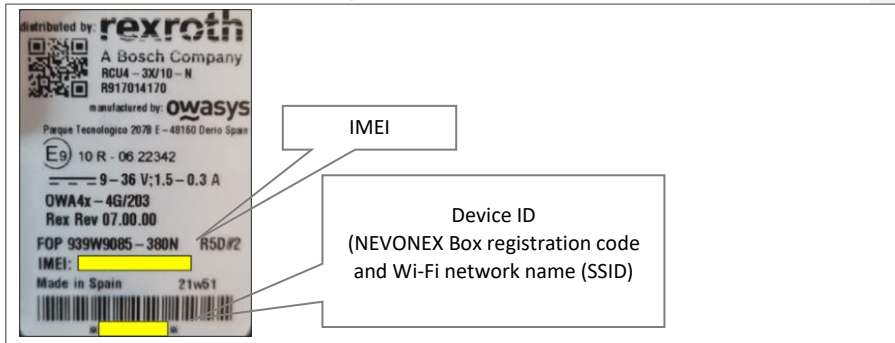

Please also include your company name and a contact person.

You can also take a picture of the nameplate and send it to NEVONEX support by email, including your company name and a contact person.

4) Confirmation of receiving the order to "Activate the NEVONEX Box."

NEVONEX support will send an email confirming the receipt of your order.

5) Let NEVONEX support do the activation

Please keep the NEVONEX Box connected to the power supply until the box has been activated. Activation is usually completed within 24 h.

6) Confirmation of "Activate the NEVONEX Box."

After the box has been activated successfully, NEVONEX support will send you a confirmation email.

7) Register the NEVONEX Box in MyNEVONEX

After activation, you can register the NEVONEX Box in your MyNEVONEX account and install the NEVONEX system test tool in order to do a system test of the box to complete the installation.

8) Mounting the NEVONEX Box onto the machine

You can now continue the installation in accordance with the "NEVONEX installation guide" in chapter 3.4 "Installation/assembly" under point 2 "Install the NEVONEX Box at the farmer/contractor."